


# How to replace filters

## SAVE-series

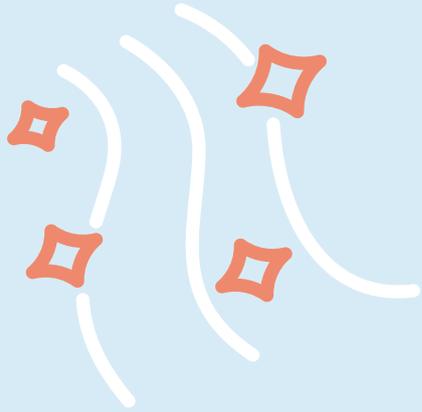




# Contents

1. SAVE VSC 100 .....	3
2. SAVE VSR 150/B .....	3
3. SAVE VSR 300/500 .....	3
4. SAVE VTR 100/B.....	4
5. SAVE VTR 150/B .....	4
6. SAVE VTR 150/K.....	4
7. SAVE VTR 250/B.....	5
8. SAVE VTR 300/B .....	5
9. SAVE VTR 500 .....	6
10. SAVE VTR 700 .....	6
11. SAVE VTC 200 .....	6
12. SAVE VTC 300.....	7
13. SAVE VTC 500 .....	7
14. SAVE VTC 700.....	7

## 1 SAVE VSC 100

When it's time to change the shown on the control panel display. When this occurs do the following:


1. Stop the unit by disconnecting the mains.
2. Remove the filter cover plates.
3. Pull out the filters towards you. Some force may be needed.
4. Insert the new filters. Make sure that the correct filter types are inserted.
5. Remount and fasten the filter cover plates and connect the unit to mains.
6. Reset the filter time.

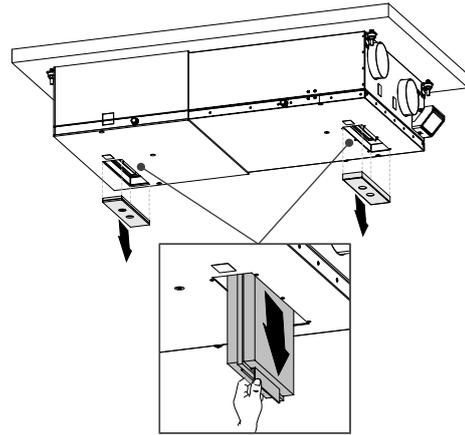

## 2 SAVE VSR 150/B

When it's time to change the filters an alarm is shown on the control panel display. When this occurs do the following:


1. Stop the unit by disconnecting the mains.
2. Remove the filter cover plates.
3. Pull out the filters towards you. Some force may be needed.
4. Insert the new filters. Make sure that the correct filter types are inserted.
5. Remount and fasten the filter cover plates and connect the unit to mains.
6. Reset the filter time.

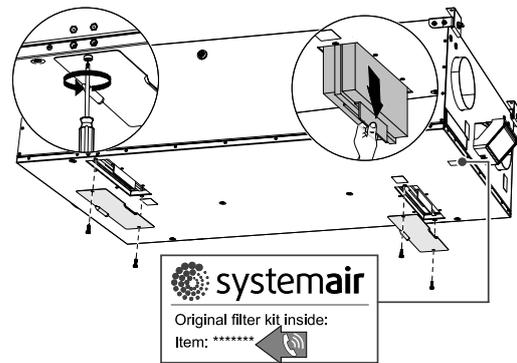

## 3 SAVE VSR 300/500

When it's time to change the filters an alarm is shown on the control panel display. When this occurs do the following:


1. Stop the unit by disconnecting the mains.
2. Open and remove the side cover.
3. Pull out the filters towards you. Some force may be needed.
4. Insert the new filters. Make sure that the correct filter types are inserted. See note above.
5. Replace and lock the side cover and connect the unit to mains.
6. Reset the filter time.

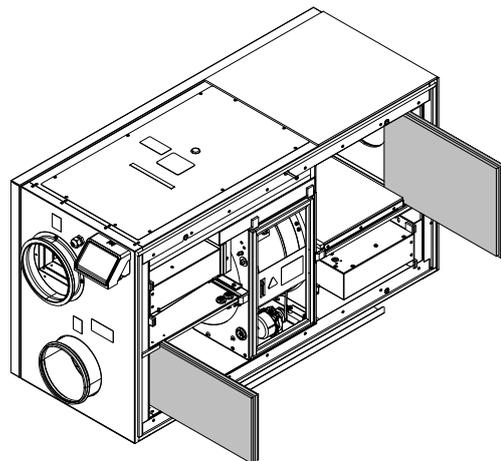

#### 4 SAVE VTR 100/B

When it's time to change the filters an alarm is shown on the control panel display. When this occurs do the following:


1. Stop the unit by disconnecting the mains.
2. Open and remove the side cover.
3. Pull out the filters towards you. Some force may be needed.
4. Insert the new filters. Make sure that the correct filter types are inserted. See note above.
5. Close and fasten the side cover and connect the unit to mains.
6. Reset the filter time.

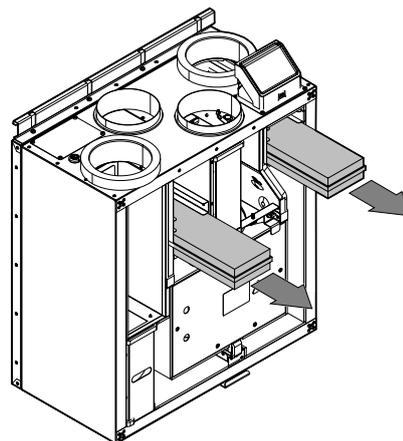

#### 5 SAVE VTR 150/B

When it's time to change the filters an alarm is shown on the control panel display. When this occurs do the following:


1. Stop the unit by disconnecting the mains.
2. Open and remove the side cover.
3. Pull out the filters towards you. Some force may be needed.
4. Insert the new filters. Make sure that the correct filter types are inserted. See note above.
5. Close and fasten the side cover and connect the unit to mains.
6. Reset the filter time.

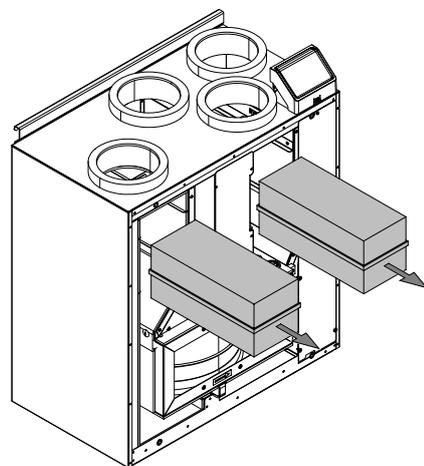

#### 6 SAVE VTR 150/K

When it's time to change the filters an alarm is shown on the control panel display. When this occurs do the following:



1. Stop the unit by disconnecting the mains.
2. Open the front hatch.
3. Pull out the filters towards you. Some force may be needed.
4. Insert the new filters. Make sure that the correct filter types are inserted.
5. Close and lock the front hatch and connect the unit to mains.
6. Reset the filter time.

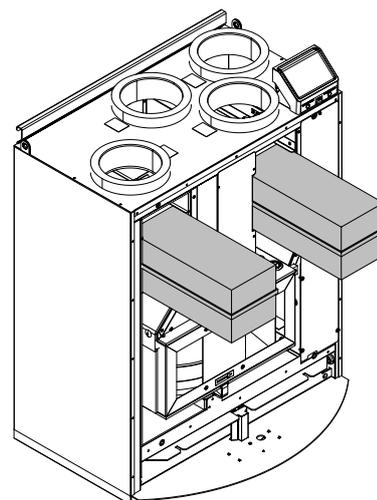

## 7 SAVE VTR 250/B

When it's time to change the filters an alarm is shown on the control panel display. When this occurs do the following:


1. Stop the unit by disconnecting the mains.
2. Open the front hatch.
3. To remove the supply air filter loosen the knobs to remove the filter lock (image shows when filter is hidden). Only one of the filter locks needs to be removed. Wiggle the filter and pull it out.
4. Insert the new filters. Make sure that the correct filter types are inserted.
5. Close and lock the front hatch and connect the unit to mains.
6. Reset the filter time.

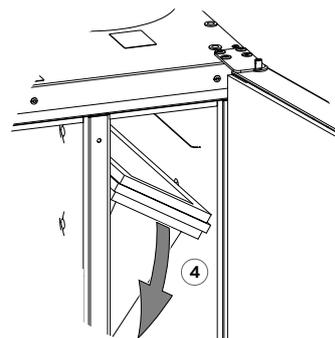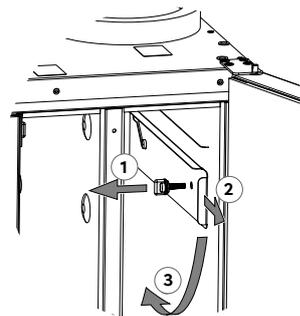

## 8 SAVE VTR 300/B

When it's time to change the filters an alarm is shown on the control panel display. When this occurs do the following:


1. Stop the unit by disconnecting the mains.
2. Open the front hatch.
3. Pull out the filters towards you. Some force may be needed.
4. Insert the new filters. Make sure that the correct filter types are inserted.
5. Close and lock the front hatch and connect the unit to mains.
6. Reset the filter time.

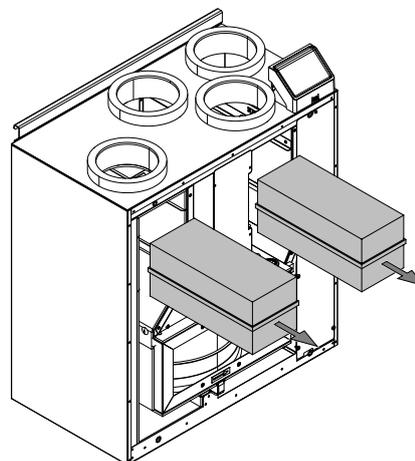

## 9 SAVE VTR 500

When it's time to change the filters an alarm is shown on the control panel display. When this occurs do the following:


1. Stop the unit by disconnecting the mains.
2. Open the front hatch.
3. Pull out the filters towards you. Some force may be needed.
4. Insert the new filters. Make sure that the correct filter types are inserted.
5. Close and lock the front hatch and connect the unit to mains.
6. Reset the filter time.

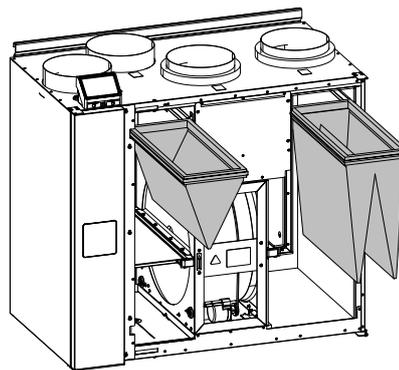

## 10 SAVE VTR 700

When it's time to change the filters an alarm is shown on the control panel display. When this occurs do the following:


1. Stop the unit by disconnecting the mains.
2. Remove the front hatch and open side doors.
3. Pull out the filters towards you. Some force may be needed.
4. Insert the new filters. Make sure that the correct filter types are inserted.
5. Close and lock the front hatch and connect the unit to mains.
6. Reset the filter time.

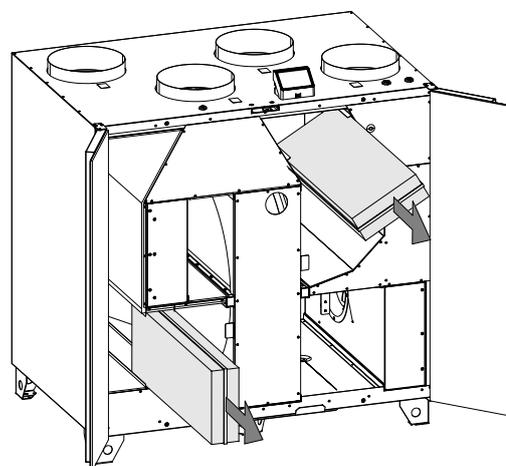

## 11 SAVE VTC 200

When it's time to change the filters an alarm is shown on the control panel display. When this occurs do the following:


1. Stop the unit by disconnecting the mains.
2. Open the front hatch.
3. Remove old filters and insert new ones. Make sure filters are not mixed up during the replacement process. Supply and extract air filters may be different.
4. Close and lock the front hatch and connect the unit to mains.
5. Reset the filter time.

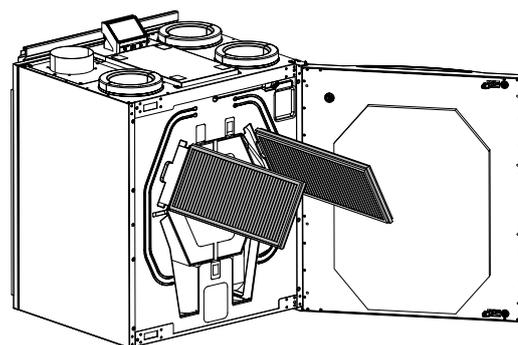

## 12 SAVE VTC 300

When it's time to change the filters an alarm is shown on the control panel display. When this occurs do the following:


1. Stop the unit by disconnecting the mains.
2. Open the front hatch.
3. Remove old filters and insert new ones. Make sure filters are not mixed up during the replacement process. Supply and extract air filters may be different.
4. Close and lock the front hatch and connect the unit to mains.
5. Reset the filter time.

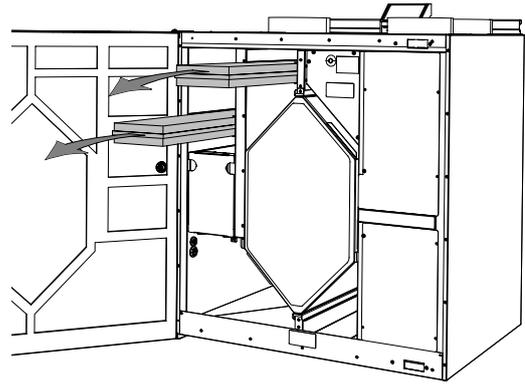

## 13 SAVE VTC 500

When it's time to change the filters an alarm is shown on the control panel display. When this occurs do the following:


1. Stop the unit by disconnecting the mains.
2. Open the front hatch.
3. Remove old filters and insert new ones. Make sure filters are not mixed up during the replacement process. Supply and extract air filters may be different.
4. Close and lock the front hatch and connect the unit to mains.
5. Reset the filter time.

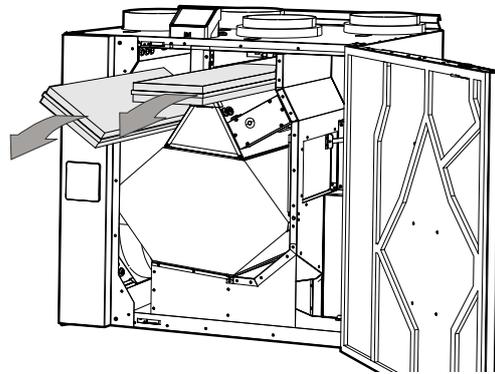

## 14 SAVE VTC 700

When it's time to change the filters an alarm is shown in the control panel display. When this occurs do the following:

1. Stop the unit by disconnecting the mains.
2. Open the front hatch.
3. Pull out the filters towards you. Some force may be needed.
4. Insert the new filters. Make sure that the correct filter types are inserted.
5. Close and lock the front hatch and connect the unit to mains.
6. Reset the filter time.

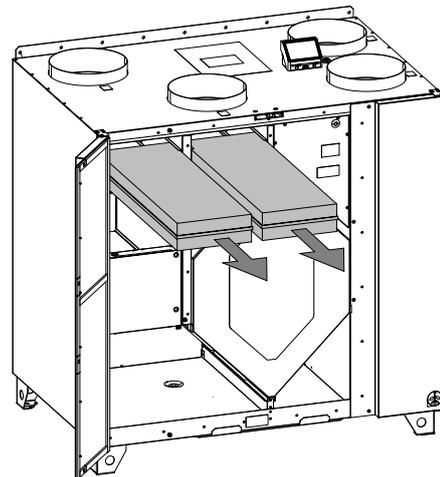



Systemair UAB  
Linių st. 101  
LT-20174 Ukmergė, LITAUEN

Phone +370 340 60165  
Fax +370 340 60166

[www.systemair.com](http://www.systemair.com)